Dome Heat Shrinkable Seal Fiber Optic Splice Closure

(FOSC)

JB-102A

(OMJB-102A,B) ZN CODE 550603

Installation Manual

Tel.:8-37-451616

1. Scope of application

This Installation Manual suits for the Fiber Optic Splice Closure (Hereafter abbreviated as FOSC), as the guidance of proper installation.

The scope of application is: aerial, underground, pipeline, hand-holes. The ambient temperature ranges from -40 to 65° C.

2. Basic structure and configuration

2.1 Dimension and capacity

Outside dimension (Height x Diameter)	540mm×205mm
Weight (excluding outside box)	3000 g— 3600g
Number of inlet/out ports	5
Diameter of fiber cable	Ф8тт~Ф36тт
Capacity of FOSC	Bunchy:24-96 (cores), Ribbon: up to 288 (cores)

2.2 Main components

No.	Name of	Quantity	Usage	Remarks
	components			
1	FOSC cover	1 piece	Protecting fiber cable splices in whole	
2	Fiber optic splice tray (FOST)	Max. 4 trays (bunchy) Max.: 4 trays (ribbon)	Fixing heat shrinkable protective sleeve and holding fibers	Suitable for: Bunchy: 24(cores) Ribbon: 12 (pieces)
3	Base	1set	Fixing internal and external structure	
4	Plastic hoop	1 set	Fixing between FOSC cover and base	
5	Seal fitting	1 piece	Sealing between FOSC cover and base	
6	Pressure testing valve	1 set	After inject air, it is used for pressure testing and sealing testing	as per requirement

Tel.:8-37-451616

Earthing deriving device Deriving metal parts of fiber cables in FOSC for earthing connection Earthing deriving device 1 set Deriving metal parts of fiber cables in FOSC for earthing connection Earthing deriving device 1 set Deriving metal parts of fiber cables in FOSC for earthing connection Earthing deriving device 1 set Earthing device	7		1 set		as per requirement
---	---	--	-------	--	--------------------

2.3 Main accessories and special tools

No.	Name of accessories	Quantity	Usage	Remarks
1	Heat shrinkable protective sleeve		Protecting fiber splices	Configuration as per capacity
2	Nylon tie		Fixing fiber with protective coat	Configuration as per capacity
3	Heat shrinkable fixing sleeve (for oval port)		Fixing and sealing single fiber cable	Configuration as per requirement
4	Heat shrinkable fixing sleeve (for round ports)		Fixing and sealing mass of fiber cable	Configuration as per requirement
5	Branching clip		Branching fiber cables	Configuration as per requirement
6	Earthing wire	1 piece	Putting through between earthing devices	
7	Labeling paper	1 piece	Labeling fibers	
8	Buffer tube	as customer's requirement	Hitched to fibers and fixed with FOST, managing buffer.	Configuration as per requirement
9	Aluminum foil paper	1piece	To protect the bottom of closure and inlet/outlet tubes when heating heat shrinkable fixing sleeve with fire sprays	

3. Necessary tools for installation

3.1 Supplementary materials (to be provided by operator)

Name of materials	Usage
Scotch tape	Labeling, temporarily fixing
Ethyl alcohol	Cleaning
Gauze	Cleaning

3.2 Special tools (to be provided by operator)

Name of tools	Usage
Fiber cutter	Cutting off fiber cable
Fiber stripper	Strip off protective coat of fiber cable
Combo tools	Assembling FOSC

3.3 Universal tools(to be provided by operator)

Tel.:8-37-451616

Name of tools	Usage and specification
Band tape	Measuring fiber cable
Pipe cutter	Cutting fiber cable
Electrical cutter	Take off protective coat of fiber cable
Combination pliers	Cutting off reinforced core
Screwdriver	Crossing/Paralleling screwdriver
Scissor	
Waterproof cover	Waterproof, dustproof
Metal wrench	Tightening nut of reinforced core


3.4 Splicing and testing instruments (to be provided by operator)

Name of instruments	Usage and specification
Fusion Splicing Machine	Fiber splicing
OT DR	Splicing testing
Provisional splicing tools	Provisional testing

Notice: The above-mentioned tools and testing instruments should be provided by the operators themselves.

Tel.:8-37-451616

4. Installation flow chart

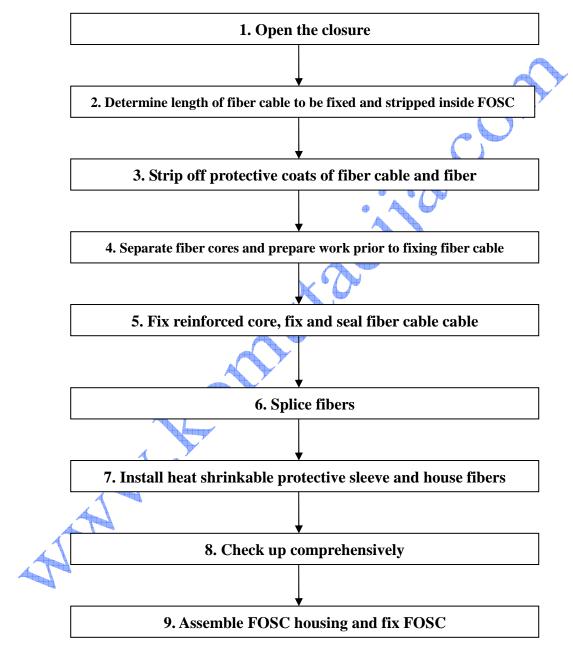

5. The process of installing FOSC.

5.1 Step One - Open the closure


5.1.1 Cleaning the locale and determine where to install the FOSC and then place

Tel.:8-37-451616

fiber cables required.

- 5.1.2 Check whether the main components and accessories have been well prepared inside the package.
- 5.1.3 Open the closure
 - ① Demount hoop fixing bolt and pull hoop locking system out, then proceed in demounting the hoop.
 - ② Pull the FOSC cover upwards out, installation could begin.
- 5.1.4 See Drawing 1

Important issues: If the weather condition is not good enough, then a tent must be pitched for waterproof and dustproof.

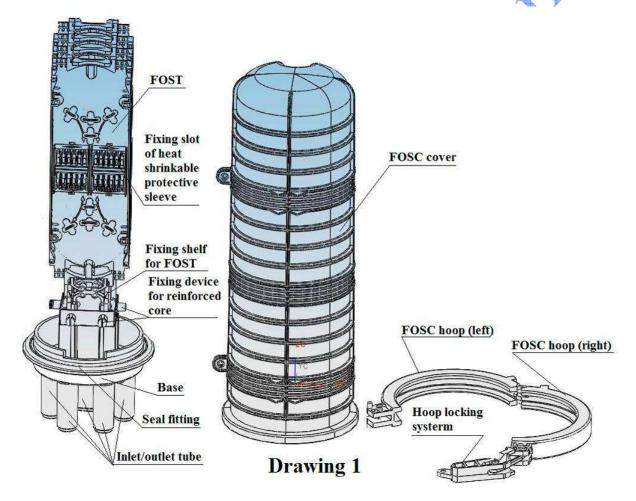

5.2 Step Two -Determine length of fiber cable to be fixed and stripped inside FOSC


- 5.2.1 If all fibers are for branch splicing, please refer to Drawing 2(A) for stripping length.
- 5.2.2 If some fibers are for straight-through, while others are for branch splicing, please refer to Drawing 2(B) for stripping length.

Tel.:8-37-451616

Fax.:8-37-310246

5.2.3 See Drawing 2.


- **Important issues:** 1. Reserve enough length of fiber cable to be spliced.
 - 2. Stripping length also could be decided by customers according to installation requirement

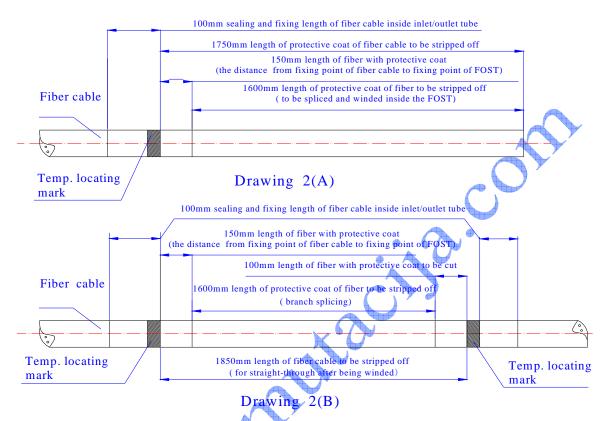

5.3 Step Three –Strip off protective coat of fiber cable and fiber

- Strip off protective coat of fiber cable from the temp. locating mark with the cutter and the stripper, please refer to Drawing 2 for stripping length. Stripping length also could be decided according to installation requirement
- 5.3.2 See Drawing 3.

Important issues: If it is difficult to pull all the protective coat of fiber cable at one time, strip it off section by section to avoid fiber breakage.

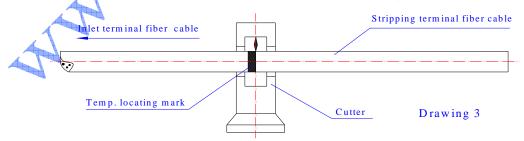

5.4 Step Four – Separate fiber cores and prepare work prior to fixing fiber cable.


5.4.1 Wind 2 layers of insulation tape on protective coat of fiber core for protection. Meanwhile, get rid of the stuffing to separate fiber core and clean them. Form a ring with the diameter of 100mm or so and fix it on the fiber temporarily by adhesive tape.

Tel.:8-37-451616

- 5.4.2 Depending on fiber cable stripped, the following two cases are available.
 - ① All fibers are to be branched after being spliced completely.
 - ② Some of fibers are for straight-through after being winded, while the others are for branch splicing.
- 5.4.3 The FOSC is provided with 4 single inlet/outlet tubes, which suit for single fiber cables with max. diameter ϕ 19mm and 1 Mass inlet/outlet for 1 looped fiber cable with max. diameter ϕ 25mm or 2 pieces of fiber cables with max. diameter ϕ 25mm.
- 5.4.4 Mass inlet/outlet tube is required if some fibers are for straight-through
- 5.4.5 The corresponding inlet/outlet tube cover could be slightly knocked out with screwdriver from inside to outside according to number and diameter of fiber cable required.
- 5.4.6 Reserve reinforced core in 70mm length and cut off the unnecessary ones
- 5.4.7 See Drawing 4 and Drawing 5.

Important Issues: Inlet/outlet tubes are to be selected accurately to make it easy for splicing and sealing.

Tel.:8-37-451616

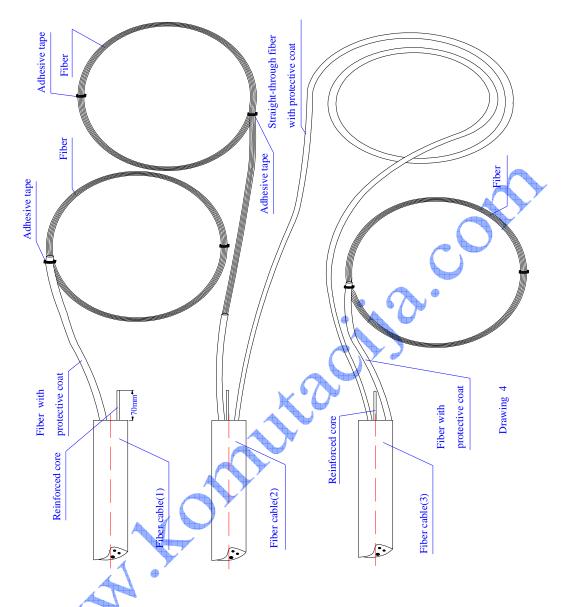


5.5 Fix reinforced core, and pyrocondense, fix and seal fiber cable.

- 5.5.1 Insert fiber cable into the corresponding heat shrinkable fixing tube, further insert the them into inlet/outlet tube at the bottom of FOSC.
- 5.5.2 Demount fixing nut of reinforced core with a special wrench (plastic one), which is to be inserted into the fixing slot afterward and tighten it. Then retighten it with a metal wrench (the metal wrench is to be provided by operator).
- 5.5.3 Hitch heat shrinkable fixing sleeve to the fiber cable till its root by hand.
- 5.5.4 Please refer to Drawing 5 for installing branching clip.
- 5.5.5 Heat heat shrinkable fixing sleeve with fire sprayer to make it hugging inlet/outlet tube and fiber cable to reach complete sealing.
- 5.5.6 See Drawing 5

important issue: 1. Fixing nut of reinforced core should be tightened.

Tel.:8-37-451616

2. While heating, heat shrinkable fixing tube should shrink evenly, and there should be no bubbles, pores and other defects inside the tube.

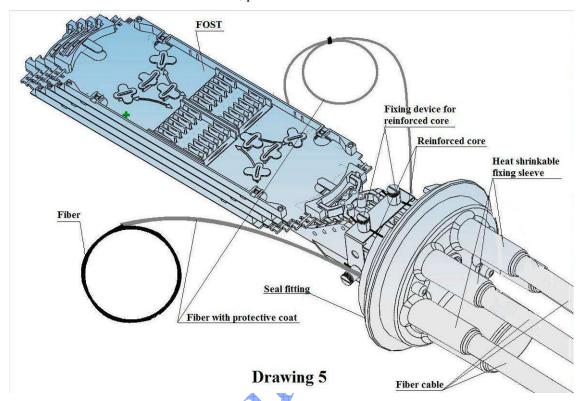

5.6 Step Six - Splice fibers

5.6.1 Follow user manual of fusion splicing machine to splice fiber.


Important issue: pay attention to the twist and bend of fiber

5.7 Step Seven -Install heat shrinkable protective sleeve and house fibers.

- 5.7.1 When having completed splicing the fibers, the first fiber ring should be housed on the farthest side of FOST, the remaining fiber optic should be winded, forming a ring with diameter not less than 80mm. then put it into FOST (Fiber Optic Splice Tray) together with heat shrinkable protective sleeve.
 - (Firstly fix heat shrinkable protective sleeve into the slot, then enlarge the diameter of fiber ring properly.)
- 5.7.2 see Drawing 6

Important issue: pay attention to the twist and bend of fiber.

Tel.:8-37-451616

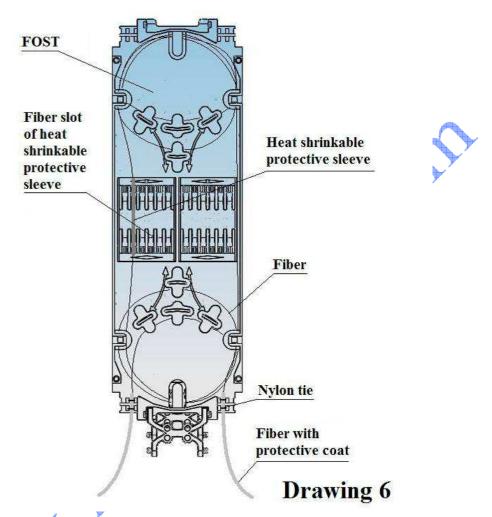


5.8 Step Eight - Check up comprehensively

To ensure the technical requirements, the following instructions must be followed:

- 5.8.1 Fibers with protective coat are fixed with nylon tie at the entrance of FOST.
- 5.8.2 Grommet should be pressed from inside to outside in order to properly install FOST.
- 5.8.3 Straight-through fibers with protective coat should be winded to the clasp, as well as reserved fibers.
- 5.8.4 Check whether the internal tighteners and fixing nut of reinforced core are well tightened.
- 5.8.5 Check whether seal fitting is installed neatly and smoothly.
- 5.8.6 Check whether heat shrinkable fixing sleeve is reliable and sealing completely.
- 5.8.7 See Drawing 7.

Important issues: If any problems occur, they should be solved right away.

Tel.:8-37-451616

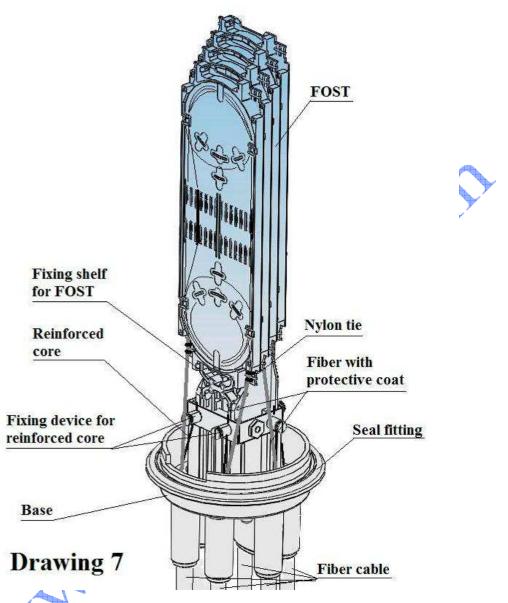

5.9 Step Nine – Assemble FOSC housing and fix FOSC

- 5.9.1 Put FOSC cover on base directly.
- 5.9.2 Install plastic hoop between FOSC cover and base, aim at the central point of the FOSC, tighten hoop locking system, which is to be fixed by hoop fixing bolt then.
- 5.9.3 FOSC installation
 - ① Aerial application: fix metal hoop and transom to the pole. Please refer to Drawing 8
 - ② Wall mounting application: fix the bracket on the wall with bolt. (metal hoop is not required.)


Tel.:8-37-451616

Fax.:8-37-310246

- ③ Underground application: metal hoop is not required.
- 5.9.4 See drawing 8

Important issues: 1. Pay attention while installing plastic hoop.

2. The specification of bolt for fixing the bracket is M8.

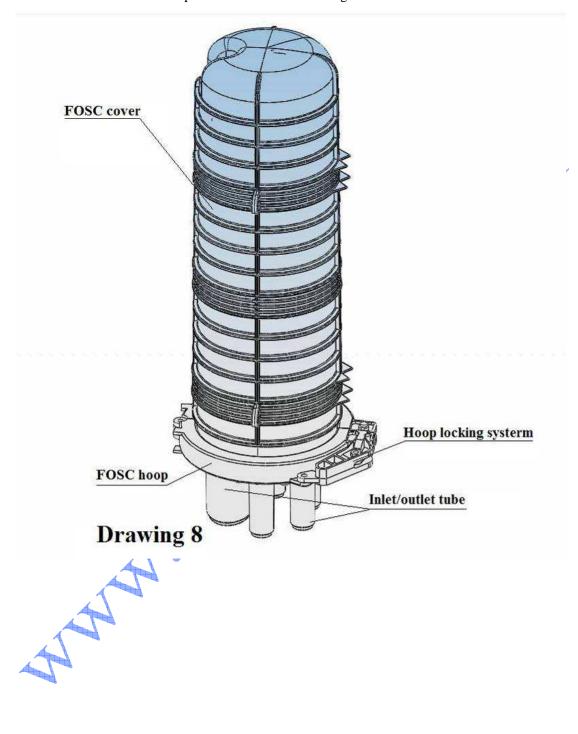

6. Fiber Optic Splice Closures (FOSC) inspecting and testing items

Tel.:8-37-451616 Fax.:8-37-310246

		Inspecting	type
Inspecting	Technical Requirements	Routine test	
item	recinical Requirements	(Before leaving	Type test
		factory)	
	Each small package contains one fiber optic splice		
Package	closure, together with its accessories, tools, installation		
	manual and packing list.		
	Intact in shape, no burrs, bubbles, chaps, pores, warps,	full	
Appearance	impurities and other defects, all background colors should	Tuli	
	be even and continual.		
Sign	There is a clear sign on the housing, such as name and		,
Sign	model of the product, etc.		
	The fibers reserved are to be winded in fiber optic splice		
Fiber storage	tray (FOST), the length of fibers housed in FOST is		
device	>1.6m, the curved radius is >30mm. During the		
device	installation and maintenance, there should be no		
	attenuation on fibers.		
Electrical	Inside FOSC: metallic components of fiber cables has the		
jointing	functions of electrical putting through, earthing		
device	connection and disconnecting. It is possible to install		At least 3
uevice	earthing deriving device outside the housing		sets
	After sealing according to the stipulated operation		sampled
Sealing	procedures, the injected air pressure is 100KPa±5Kpa,		each time
performance	when immersed in clean water of normal temperature for	At least 3 sets	
performance	15 minutes, there should be no air bubbles, then observed	sampled each	
	for 24 hours, there should be no change of air pressure.	time	
	After reopening and resealing according to the stipulated	time	
	operation procedures, the injected air pressure is 100KPa		
Re-sealing	\pm 5Kpa, when immersed in clean water of normal		
performance	temperature for 15 minutes, there should be no air		
	bubbles, then observed for 24 hours, there should be no		
	change of air pressure.		
Pull	Bearing pull is \geq 800N at axle orientation, there should		
Tun	be no breakage on the housing.		
Punching	Bearing pressure of 2000N/10cm for 1 minutes, there		
1 unching	should be no breakage on the housing		
Impact	Bearing impact energy of 16N • m, 3 times of impacts there		
Impact	should be not breakage on the housing		
	The spot between the FOSC and seal fitting can bear	At least 3 sets	At least 3
Bending	bending tension of 150N at bending angle of $\pm 45^{0}$ for 10	sampled each	sets
	circles, there should be no breakage on the housing	time	sampled

Tel.:8-37-451616

	,			
Torsion	Bearing torsion 50N•m, 10 circle at torsion angle±90 ⁰ ,		each time	
101 51011	There should be no breakage on the housing.			
	Injected air pressure of 60KPa±5 KPa, the temperature			
	circle ranging from -40°C ~+65°C, 10 times of the circular			
	tests (one circular consists of high temperature for 2 hours			
Temperature	+ indoor temperature for 2 hours + low temperature for 2			
circle	hours + indoor temperature for 2 hours) when the			
	pressure declines, the amplitude is ≤ 5 Kpa, immerse the			
	swatch in clean water of normal temperature for 15			
	minutes, there should be no air bubbles.			
	After sealing the FOSC according to the stipulated			
Voltago	operation procedures, immerse it in clean water of normal			
Voltage resistance	temperature in 1.5m depth for 24 hours, there should be			
strength	no breakdown or arc over between the metallic			
suengm	components of the FOSC, between metallic components	*		
	and the ground at DC 15KV for 1 minutes.			
Isolating	After sealing the FOSC according to stipulated operation			
resistance	procedure, immerse it in clean water in 1.5m depth for			
	24h, the isolating resistance between the metallic			
	components of the FOSC, between the metallic			
	components and the ground should be $\geq 2 \times 10^4 \text{M} \Omega$.			

Tel.:8-37-451616