Dome Heat Shrinkable Seal Fiber Optic Splice Closure .J1 .-201) Installation Manual

Tel.:8-37-451616

1. Scope of application

This Installation Manual suits for the Fiber Optic Splice Closure (Hereafter abbreviated as FOSC), as the guidance of proper installation.

The scope of application is: aerial, underground, wall-mounting, duct-mounting and handhole-mounting. The ambient temperature ranges from $-40\,^{\circ}\text{C}$ to $+65\,^{\circ}\text{C}$.

2. Basic structure and configuration

2.1 Dimension and capacity

Outside dimension (Height x Diameter)	435mm×190mm
Weight (excluding outside box)	2350 g— 2600g
Number of inlet/out ports	5 pieces in general
Diameter of fiber cable	Φ8mm~Φ25 mm
Capacity of FOSC	Bunchy: 12-96 (cores), Ribbon: up to 288 (cores)

2.2 Main components

No.	Name of components	Quantity	Usage	Remarks
1	FOSC cover	1 piece	Protecting fiber cable	Height x Diameter
			splices in whole	355mm x 150mm
2	Fiber optic splice tray	Max. 6 trays	Fixing heat shrinkable	Suitable for:
				Bunchy:12,24(cores)
	(FOST)	(bunchy)	protective sleeve and	Ribbon:6 (pieces)
		Max. 4 trays	holding fibers	
	4	(ribbon)		
3	Fiber holding tray	1 pcs	Holding fibers with	
			protective coat	
4	Base	1set	Fixing internal and external	
	44		structure	
5	Plastic hoop	1 set	Fixing between FOSC	
			cover and base	
6	Seal fitting	1 piece	Sealing between FOSC	
			cover and base	
7	Pressure testing valve	1 set	After inject air, it is used for	Configuration as per
			pressure testing and sealing	requirement
			testing	

Tel.:8-37-451616

8	Earthing deriving	1 set	Deriving metal parts of	Configuration as per
			fiber cables in FOSC for	requirement
	device		earthing connection	

2.3 Main accessories and special tools

No.	Name of accessories	Quantity	Usage	Remarks
1	Heat shrinkable protective		Protecting fiber splices	Configuration as
	sleeve			per capacity
2	Nylon tie		Fixing fiber with protective	Configuration as
			coat	per capacity
3	Heat shrinkable fixing sleeve		Fixing and sealing single	Configuration as
	(single)		fiber cable	per requirement
4	Heat shrinkable fixing sleeve		Fixing and sealing mass of	Configuration as
	(mass)		fiber cable	per requirement
5	Branching clip		Branching fiber cables	Configuration as
				per requirement
6	Earthing wire	1 piece	Putting through between	
			earthing devices	
7	Desiccant	1 bag	Put into FOSC before sealing	
		A	for desiccating air	
8	Labeling paper	1 piece	Labeling fibers	
9	Special wrench	1 piece	Tightening nut of reinforced	
			core	
10	Metal hoop	1 set	For wall mounting and pole	
			hugging	
11	Buffer tube	decided by	Hitched to fibers and fixed	Configuration as
		customers	with FOST, managing buffer.	per requirement
12	Aluminum foil	1pc	Protect the bottom of FOSC	

3. Necessary tools for installation

3.1 Supplementary materials (to be provided by operator)

Name of materials	Usage
Scotch tape	Labeling, temporarily fixing
Ethyl alcohol	Cleaning
Gauze	Cleaning

Tel.:8-37-451616

3.2 Special tools (to be provided by operator)

Name of tools	Usage
Fiber cutter	Cutting off fiber cable
Fiber stripper	Strip off protective coat of fiber cable
Combo tools	Assembling FOSC

3.3 Universal tools(to be provided by operator)

Name of tools	Usage and specification
Band tape	Measuring fiber cable
Pipe cutter	Cutting fiber cable
Electrical cutter	Take off protective coat of fiber cable
Combination pliers	Cutting off reinforced core
Screwdriver	Crossing/Paralleling screwdriver
Scissor	K O
Waterproof cover	Waterproof, dustproof
Metal wrench	Tightening nut of reinforced core


3.4 Splicing and testing instruments (to be provided by operator)

Name of instruments	Usage and specification
Fusion Splicing Machine	Fiber splicing
OT DR	Splicing testing
Provisional splicing tools	Provisional testing
Fire sprayer	Sealing heat shrinkable fixing sleeve

Notice: The above-mentioned tools and testing instruments should be provided by the operators themselves.

Tel.:8-37-451616

4. Installation flow chart

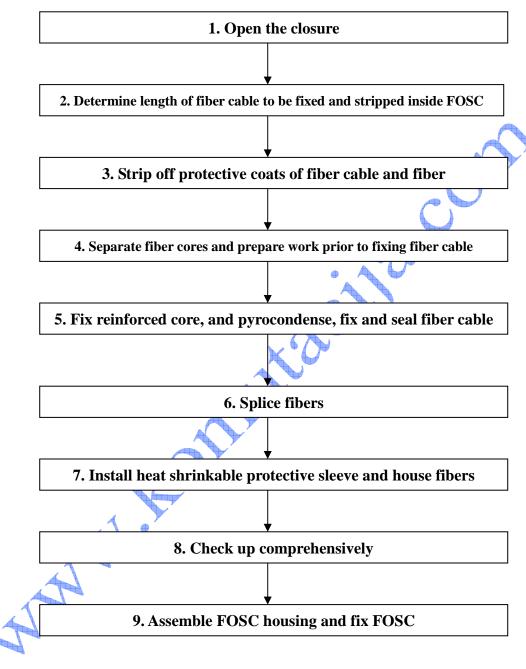

5. The process of installing FOSC.

5.1 Step One - Open the closure

- 5.1.1 Cleaning the locale and determine where to install the FOSC and then place fiber cables required.
- 5.1.2 Check whether the main components and accessories have been well prepared inside the package.

Tel.:8-37-451616


Fax.:8-37-310246

5.1.3 Open the closure

- ① Demount hoop fixing bolt and pull hoop locking system out, then proceed in demounting the hoop.
- 2 Pull the FOSC cover upwards out, installation could begin.

5.1.4 See Drawing 1

Important issues: If the weather condition is not good enough, then a tent must be pitched for waterproof and dustproof.

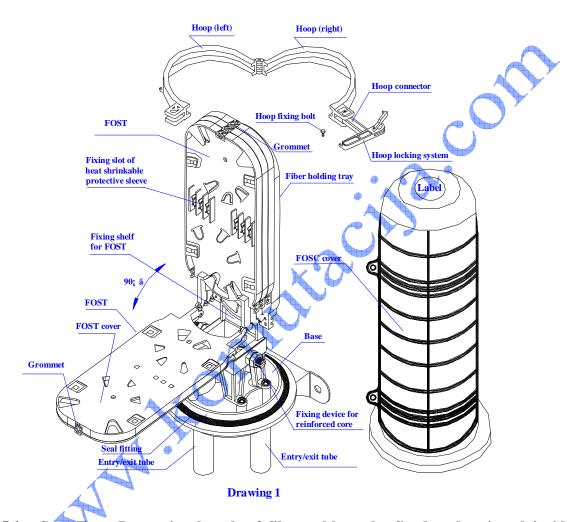


5.2 Step Two -Determine length of fiber cable to be fixed and stripped inside FOSC

- 5.2.1 If all fibers are for branch splicing, please refer to Drawing 2(A) for stripping length.
- 5.2.2 If some fibers are for straight-through, while others are for branch splicing, please refer to Drawing 2(B) for stripping length.
- 5.2.3 See Drawing 2.

Important issues: 1. Reserve enough length of fiber cable to be spliced.


2. Stripping length also could be decided by customers according to installation requirement

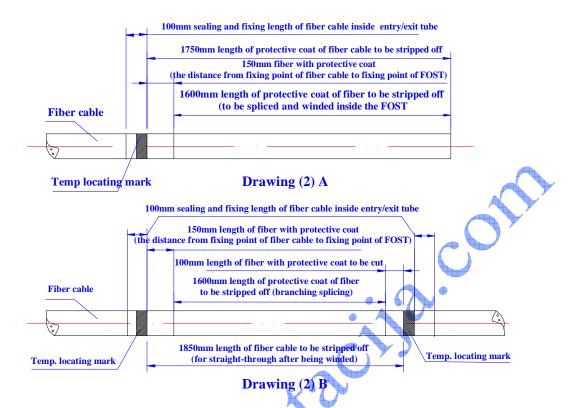

5.3 Step Three –Strip off protective coat of fiber cable and fiber

- 5.3.1 Strip off protective coat of fiber cable from the temp. locating mark with the cutter and the stripper, please refer to Drawing 2 for stripping length. Stripping length also could be decided according to installation requirement
- 5.3.2 See Drawing 3.

Important issues: If it is difficult to pull all the protective coat of fiber cable at one time, strip it off section by section to avoid fiber breakage.

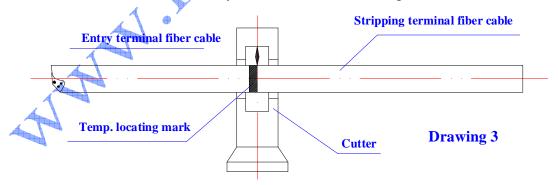

5.4 Step Four – Separate fiber cores and prepare work prior to fixing fiber cable.

- 5.4.1 Wind 2 layers of insulation tape on protective coat of fiber core for protection.

 Meanwhile, get rid of the stuffing to separate fiber core and clean them. Form a ring with the diameter of 100mm or so and fix it on the fiber temporarily by adhesive tape.
- 5.4.2 Depending on fiber cable stripped, the following two cases are available.
 - ① All fibers are to be branched after being spliced completely.

6


komutacija@gmail.com petras@zaliasis-namas.lt Tel.:8-37-451616

Fax.:8-37-310246

www.komutacija.com www.zaliasis-namas.lt

- ② Some of fibers are for straight-through after being winded, while the others are for branch splicing.
- 5.4.3 The FOSC is provided with 3 single entry/exit tubes which suit for single fiber cables with max. diameter φ16mm and 1 mass entry/exit tube which suits for 1 piece of fiber cable with max. diameter φ 25mm or 2 pieces of fiber cables with max. diameter φ 21mm or multi-pieces of fiber cables with short diameter.
- 5.4.4 Mass entry/exit tube is required if some fibers are for straight-through
- 5.4.5 The corresponding entry/exit tube cover could be slightly knocked out with screwdriver from inside to outside according to number and diameter of fiber cable required.
- 5.4.6 Reserve reinforced core in 70mm length and cut off the unnecessary ones.
- 5.4.7 See Drawing 4 and Drawing 5.

Important Issues: Entry/exit tubes are to be selected accurately to make it easy for splicing and sealing.

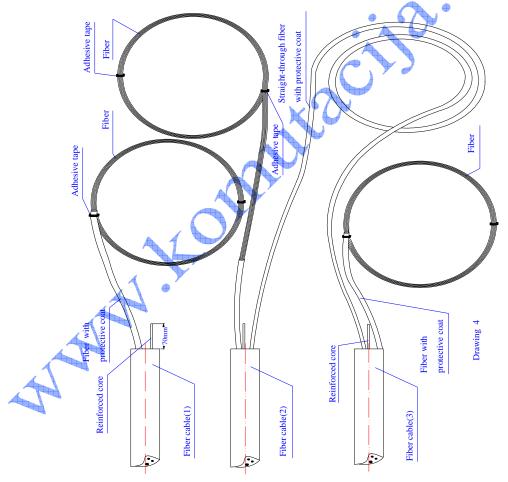


5.5 Fix reinforced core, and pyrocondense, fix and seal fiber cable.

- 5.5.1 Insert fiber cable into the corresponding heat shrinkable fixing tube, further insert the them into entry/exit tube at the bottom of FOSC.
- 5.5.2 Demount fixing nut of reinforced core with a special wrench (plastic one), which is to be inserted into the fixing slot afterward and tighten it. Then retighten it with a metal

- wrench (the metal wrench is to be provided by operator).
- 5.5.3 Hitch heat shrinkable fixing sleeve to the fiber cable till its root by hand.
- 5.5.4 Please refer to Drawing 5 for installing branching clip.
- 5.5.5 Heat heat shrinkable fixing sleeve with fire sprayer to make it hugging entry/exit tube and fiber cable to reach complete sealing.
- 5.5.6 See Drawing 5

important issue: 1. Fixing nut of reinforced core should be tightened.

2. While heating, heat shrinkable fixing tube should shrink evenly, and there should be no bubbles, pores and other defects inside the tube.

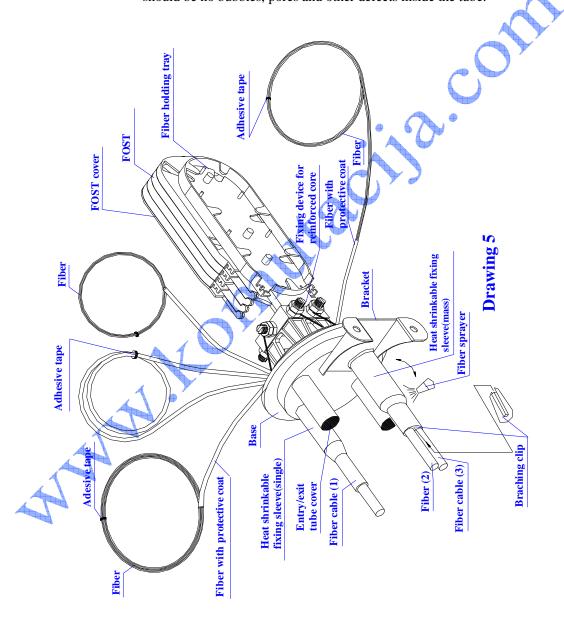

5.6 Step Six - Splice fibers

5.6.1 Follow user manual of fusion splicing machine to splice fiber.


Important issue: pay attention to the twist and bend of fiber

5.7 Step Seven -Install heat shrinkable protective sleeve and house fibers.

5.7.1 When having completed splicing the fibers, the first fiber ring should be housed on the farthest side of FOST, the remaining fiber optic should be winded, forming a ring with diameter not less than 80mm. then put it into FOST (Fiber Optic Splice Tray) together with heat shrinkable protective sleeve.

(Firstly fix heat shrinkable protective sleeve into the slot, then enlarge the diameter of fiber ring properly.)

5.7.2 see Drawing 6

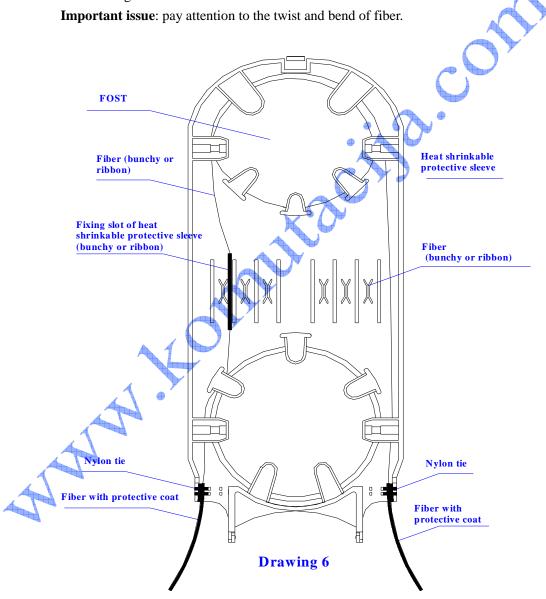


5.8 Step Eight - Check up comprehensively

To ensure the technical requirements, the following instructions must be followed:

- 5.8.1 Fibers with protective coat are fixed with nylon tie at the entrance of FOST.
- 5.8.2 Grommet should be pressed from inside to outside in order to properly install FOST.

- 5.8.3 Straight-through and reserved fibers with protective coat should be winded to the fiber holding tray.
- 5.8.4 Check whether the internal tighteners and fixing nut of reinforced core are well tightened.
- 5.8.5 Check whether seal fitting is installed neatly and smoothly.
- 5.8.6 Check whether heat shrinkable fixing sleeve is reliable and sealing completely.
- 5.8.7 See Drawing 7.

Important issues: If any problems occur, they should be solved right away.

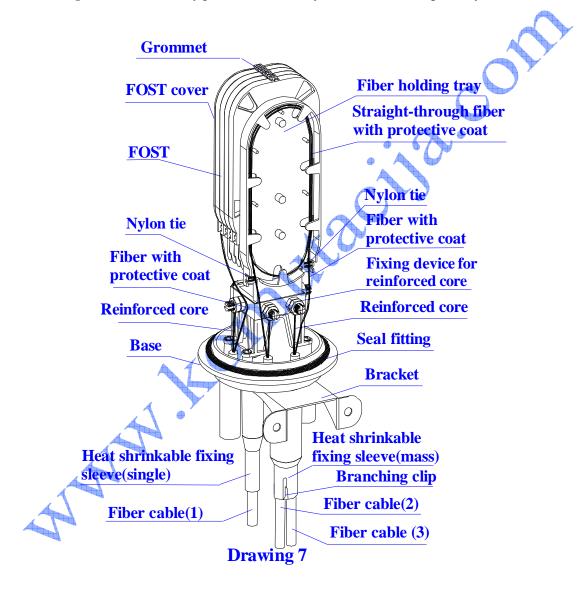

5.9 Step Nine – Assemble FOSC housing and fix FOSC

- 5.9.1 Put desiccant into FOSC.
- 5.9.2 Put FOSC cover on base directly.
- 5.9.3 Install plastic hoop between FOSC cover and base, tighten hoop locking system, which is to be fixed by hoop fixing bolt then.

Tel.:8-37-451616


5.9.4 FOSC installation

- ① Aerial application: fix metal hoop and transom to the pole. Please refer to Drawing 8
- ② Wall mounting application: fix the bracket on the wall with bolt. (metal hoop is not required.)
- ③ Underground application: metal hoop is not required.

5.9.5 See drawing 8

Important issues: 1. Pay attention while installing plastic hoop.

2. The specification of bolt for fixing the bracket is M8.

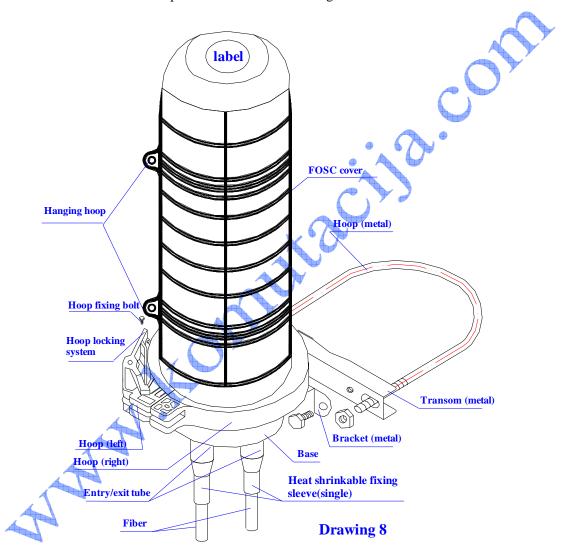

6. Fiber Optic Splice Closures (FOSC) inspecting and testing items

Tel.:8-37-451616

		Routine test	
		(Before leaving	Type test
		factory)	Type test
	Each small package contains one fiber optic splice	, , , , , , , , , , , , , , , , , , ,	
Package	closure, together with its accessories, tools, installation		
l and ange	manual and packing list.		
	Intact in shape, no burrs, bubbles, chaps, pores, warps,		
Appearance	impurities and other defects, all background colors should	full	
PF	be even and continual.		
	There is a clear sign on the housing, such as name and		
Sign	model of the product, etc.		
	The fibers reserved are to be winded in fiber optic splice		
	tray (FOST), the length of fibers housed in FOST is		
Fiber storage	>1.6m, the curved radius is >30mm. During the		
device	installation and maintenance, there should be		
	attenuation on fibers.		
	Inside FOSC: metallic components of fiber cables has the		
Electrical	functions of electrical putting through, earthing		
jointing	connection and disconnecting. It is possible to install		
device	earthing deriving device outside the housing		At least 3
	After sealing according to the stipulated operation		sets
	procedures, the injected air pressure is 100KPa±5Kpa,		sampled
Sealing	when immersed in clean water of normal temperature for		each time
performance	15 minutes, there should be no air bubbles, then observed		caen time
	for 24 hours, there should be no change of air pressure.	At least 3 sets	
	After reopening and resealing according to the stipulated	sampled each	
	operation procedures, the injected air pressure is 100KPa	time	
Re-sealing	± 5Kpa, when immersed in clean water of normal		
performance	temperature for 15 minutes, there should be no air		
performance	bubbles, then observed for 24 hours, there should be no		
	change of air pressure.		
	Bearing pull is ≥ 800 N at axle orientation, there should		
Pull	be no breakage on the housing.		
	Bearing pressure of 2000N/10cm for 1 minutes, there		
Punching	should be no breakage on the housing		
	Bearing impact energy of 16N•m, 3 times of impacts there		
Impact	should be not breakage on the housing		
	The spot between the FOSC and seal fitting can bear		
Bending	bending tension of 150N at bending angle of $\pm 45^{\circ}$ for 10		
	circles, there should be no breakage on the housing		

Torsion	Bearing torsion 50N•m, 10 circle at torsion angle±90 ⁰ . There should be no breakage on the housing.		
10131011	There should be no breakage on the housing.		
	Injected air pressure of 60KPa±5 KPa, the temperature		
	circle ranging from -40 $^{\circ}$ C ~+65 $^{\circ}$ C, 10 times of the circular		
	tests (one circular consists of high temperature for 2 hours		
Temperature	+ indoor temperature for 2 hours + low temperature for 2		
circle	hours + indoor temperature for 2 hours) when the		
	pressure declines, the amplitude is ≤ 5 Kpa, immerse the		
	swatch in clean water of normal temperature for 15		
	minutes, there should be no air bubbles.		
	After sealing the FOSC according to the stipulated		y
Voltage	operation procedures, immerse it in clean water of normal		
resistance	temperature in 1.5m depth for 24 hours, there should be		
strength	no breakdown or arc over between the metallic		
strength	components of the FOSC, between metallic components		
	and the ground at DC 15KV for 1 minutes.		
Isolating	After sealing the FOSC according to stipulated operation		
resistance	procedure, immerse it in clean water in 1.5m depth for		
	24h, the isolating resistance between the metallic		
	components of the FOSC, between the metallic		
	components and the ground should be $\ge 2 \times 10^4 \text{M} \Omega$.		

Tel.:8-37-451616